

## Quick Start Guide

### Haivision Media Gateway Server, Version 3.0

This quick start guide includes the basic steps required to install and connect to your Media Gateway server.

For detailed configuration and operation information, please refer to the *User's Guide* (available at <https://doc.haivision.com>). For the default credentials, refer to the *Important Notice* document (shipped with the appliance or available on the Haivision Support Portal at <http://support.haivision.com>).

#### Safety Guidelines

Use the following guidelines when unsafe conditions exist or when potentially hazardous voltages are present:

- Always use caution and common sense.
- To reduce the risk of electrical shock, do not operate equipment with the cover removed.
- Repairs must be performed by qualified service personnel only.

Improper handling and/or installation practices of sensitive equipment may VOID the warranty.



#### CAUTION

When handling components, or when setting switch options, always use an antistatic wrist strap connected to a grounded equipment frame or chassis. *If a wrist strap is not available, periodically touch an unpainted metal surface on the equipment.* Never use a conductive tool, such as a screwdriver or a paper clip, to set switches.

## Connecting the Server

To connect the server:


1. Open the box, verify the contents, and visually inspect the items for any shipping damage. If necessary, contact Haivision for return instructions.
2. Unpack the box and position the hardware on a stable work surface. Optionally, mount the device in a server rack.




### CAUTION

When mounting in a server rack, refer to your rack vendor's documentation as well as the included rack mount instructions in the rail kit provided with your system. Improper rack mounting could cause serious harm to equipment and/or people near the rack. Please be sure to properly and securely mount your hardware.


Ensure that the final location has proper airflow. Do not block or impede airflow to the vents.

3. On the device:
  - Connect to your network using an Ethernet cable. For most configurations, use the port labeled Gb1 or NIC0.
  - For initial setup purposes, attach a mouse, keyboard, and monitor to the available USB and VGA ports.
  - If necessary, connect any cables to the available I/O ports as shown in the following diagram(s).
  - Attach the power cord to the power receptacle.
4. On the front of the device, press the  button to power it on. The power LED lights.

#### Front (S-MG-200 server)


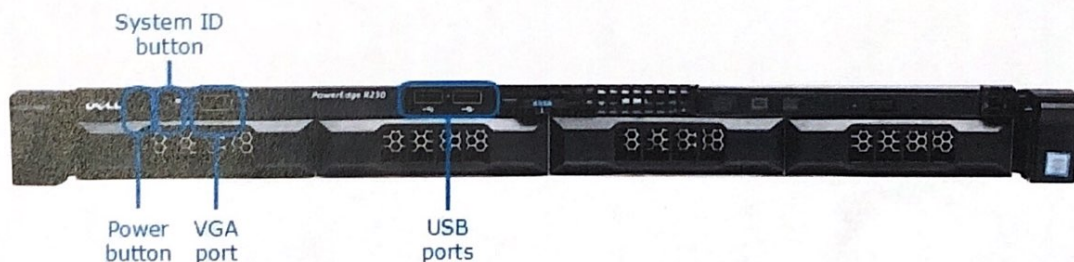




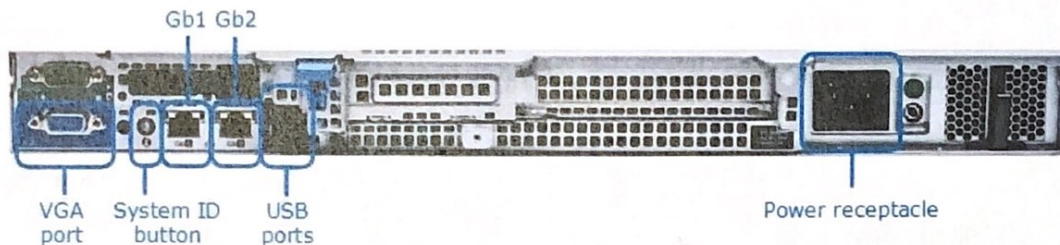

**Back (S-MG-200 server)****LED Status Indicators (S-MG-200 server)**

The LED colors and flashing (blinking) speed indicate the status (operational state) of the server.

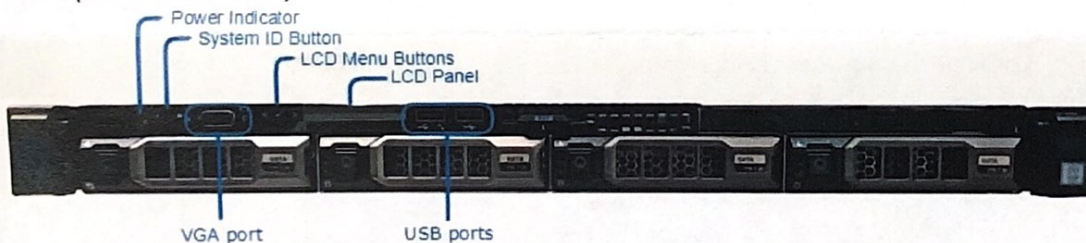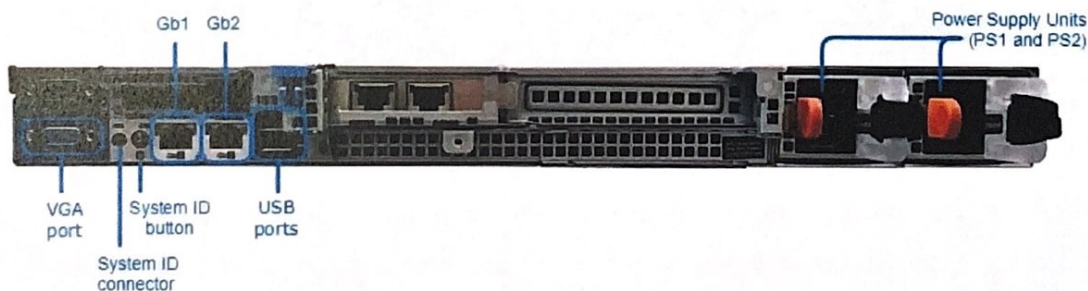Indicator	Icon	Description
Power-On		On the front of the server, the power-on indicator lights when the system power is on. The Power button controls the power supply output to the system.
System ID Button		On the front and back of the server, the System ID button can be used to locate a particular system within a rack. When one is pressed, the system status indicator on the back flashes until one of the buttons is pressed again.

**Front (S-MG-500 server)****Back (S-MG-500 server)****LED Status Indicators (S-MG-500 server)**

The LED colors and flashing (blinking) speed indicate the status (operational state) of the server.

Indicator	Icon	Description
<b>Front</b>		
Power-On		Power-on indicator lights when the system power is on. The Power button controls the power supply output to the system.
LCD Panel		Displays system ID, status information, and system error messages. <ul style="list-style-type: none"> <li>LCD lights blue during normal system operation</li> <li>LCD lights amber when the system needs attention, and the LCD panel displays an error code followed by descriptive text</li> </ul>
<b>Front and Back</b>		
System ID Button		Can be used to locate a particular system within a rack. When one is pressed, the system status indicator on the back flashes until one of the buttons is pressed again.

## Changing Network Settings

### NOTE

After first boot, the device attempts to obtain an IP address from a DHCP server on your network. We recommend that you change to a static IP address before continuing with the setup. Contact your network administrator for guidance on which network settings to use. The following section takes you through the steps to update your network settings using the Console UI.


To change the network settings of the device:

1. After the system boots, the Console UI welcome screen appears on the attached monitor. The IP Address assigned to the device is noted on the welcome screen.



2. Log in to the Console UI using the credentials in the *Important Notice*.
3. In the navigation sidebar, use the ↑↓ (up and down arrow) keys to highlight **Network Settings**, and then press the **Enter** key.
4. Change the Hostname, IP Address, Gateway Address, Boot Protocol (dhcp or static), and any other settings as necessary.



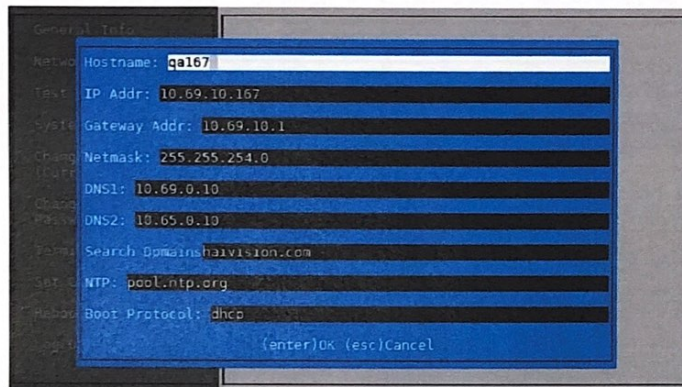

5. Press the **Enter** key to save your changes and return to the main screen.

**i NOTE**

After pressing Enter, it takes a few seconds for the settings to be saved. The system may seem unresponsive during this time.


6. Select **Log Out** and then press the **Enter** key to exit the Console UI.

For more details, refer to *Using the Console UI in the Media Gateway User's Guide*.

## Accessing the Web Interface

To access the device's Web interface:

1. On another computer connected to the same network, open a Web browser.
2. Enter the device's assigned IP address. For example, if the IP Address is 10.5.1.4, enter a URL of `https://10.5.1.4`.
3. When a browser accesses the website, it requests a security certificate to confirm that the site is trusted.  
The device ships with a self-signed SSL certificate key set which works with any configured server hostname. However, Web browsers do not consider self-signed certificates to be trusted, because they are not signed by a Certificate Authority. Consequently, when accessing the website with a self-signed certificate, users see a security warning and are prompted for authorization as shown below. Responses may vary depending upon the browser used.

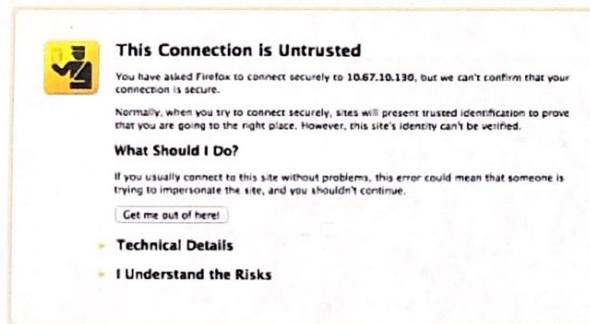

### IMPORTANT

Before proceeding or adding an exception for the site, check with your administrator on the correct response.

4. Sign in using one of the credentials provided in the *Important Notice* document included with your device.

The Web interface opens to the Browse Routes screen.



For step-by-step information on using the web interface, refer to the [Media Gateway User's Guide](#).

## Waste Electrical and Electronic Equipment (WEEE) Disposal



In accordance with the European Union (EU) WEEE Directive, Haivision products that fall within the scope of the WEEE, are labeled with the above symbol, and customers are encouraged to responsibly recycle their equipment at the time of disposal. Haivision also offers its customers the option of returning Haivision equipment to facilitate its environmentally sound disposal.

For more information, please visit our website at: <https://www.haivision.com/environment>.